


STS UNIT CONSOLE + POWER CORD


Connectivity scheme

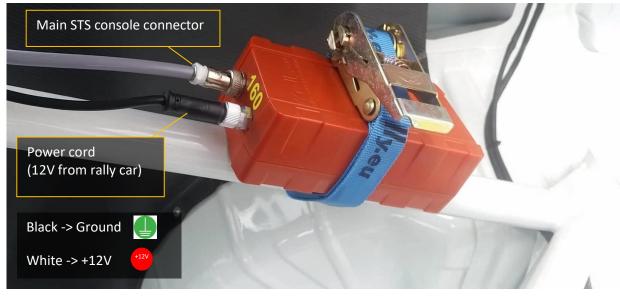






Installation scheme

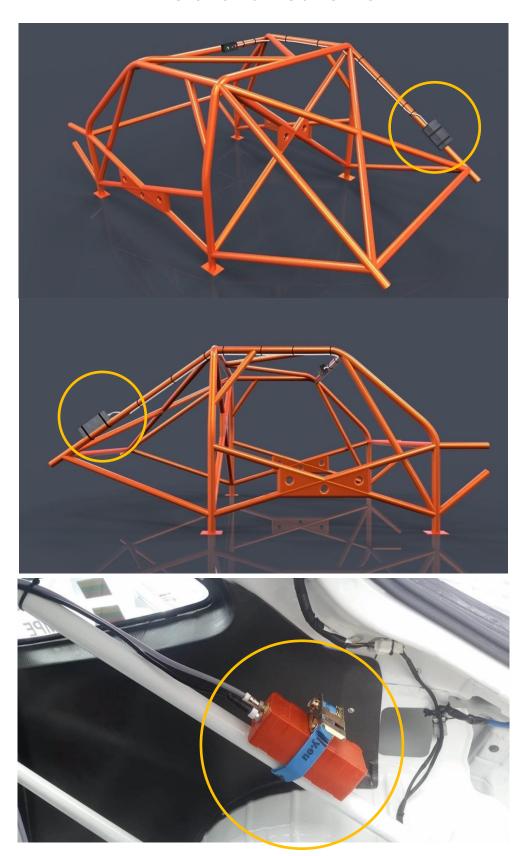



POWER CORD CONNECTION

(PLEASE CONNECT STS TO POWER ONLY IN RALLY CAR, DURING RECCE STS USE INTERNAL BATTERY)

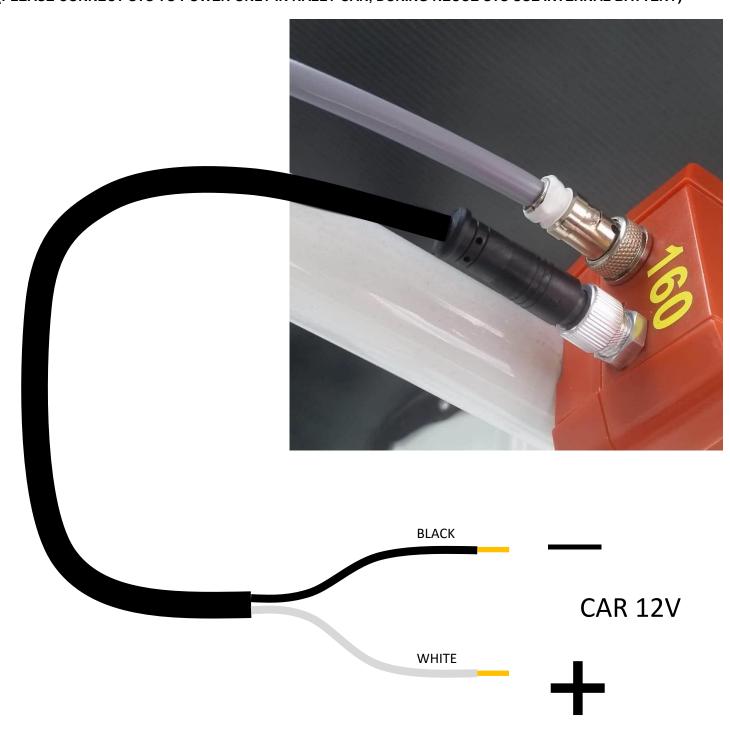



SPECIAL IFORMATION STICKER PLACE:



If vehicle stops on a special stage, an alert will be raised automatically.
You have only 30 sek. to push OK button to indicate to all monitoring stations that you do not require assistance.

RACE CONTROL CENTER

+XXX XXX XXX



